


**INITIAL RADIO CONTACT:** 12 nm on assigned air tactical frequency.

**CLEARANCE IS REQUIRED TO ENTER FTA**

**NO RADIO CONTACT:** Hold a minimum of 7 nm from the incident.

**Note:** Airtanker maneuvering altitude determines minimum airtanker and ATGS orbit altitudes. Assigned altitudes may be higher and will be stated as MSL.

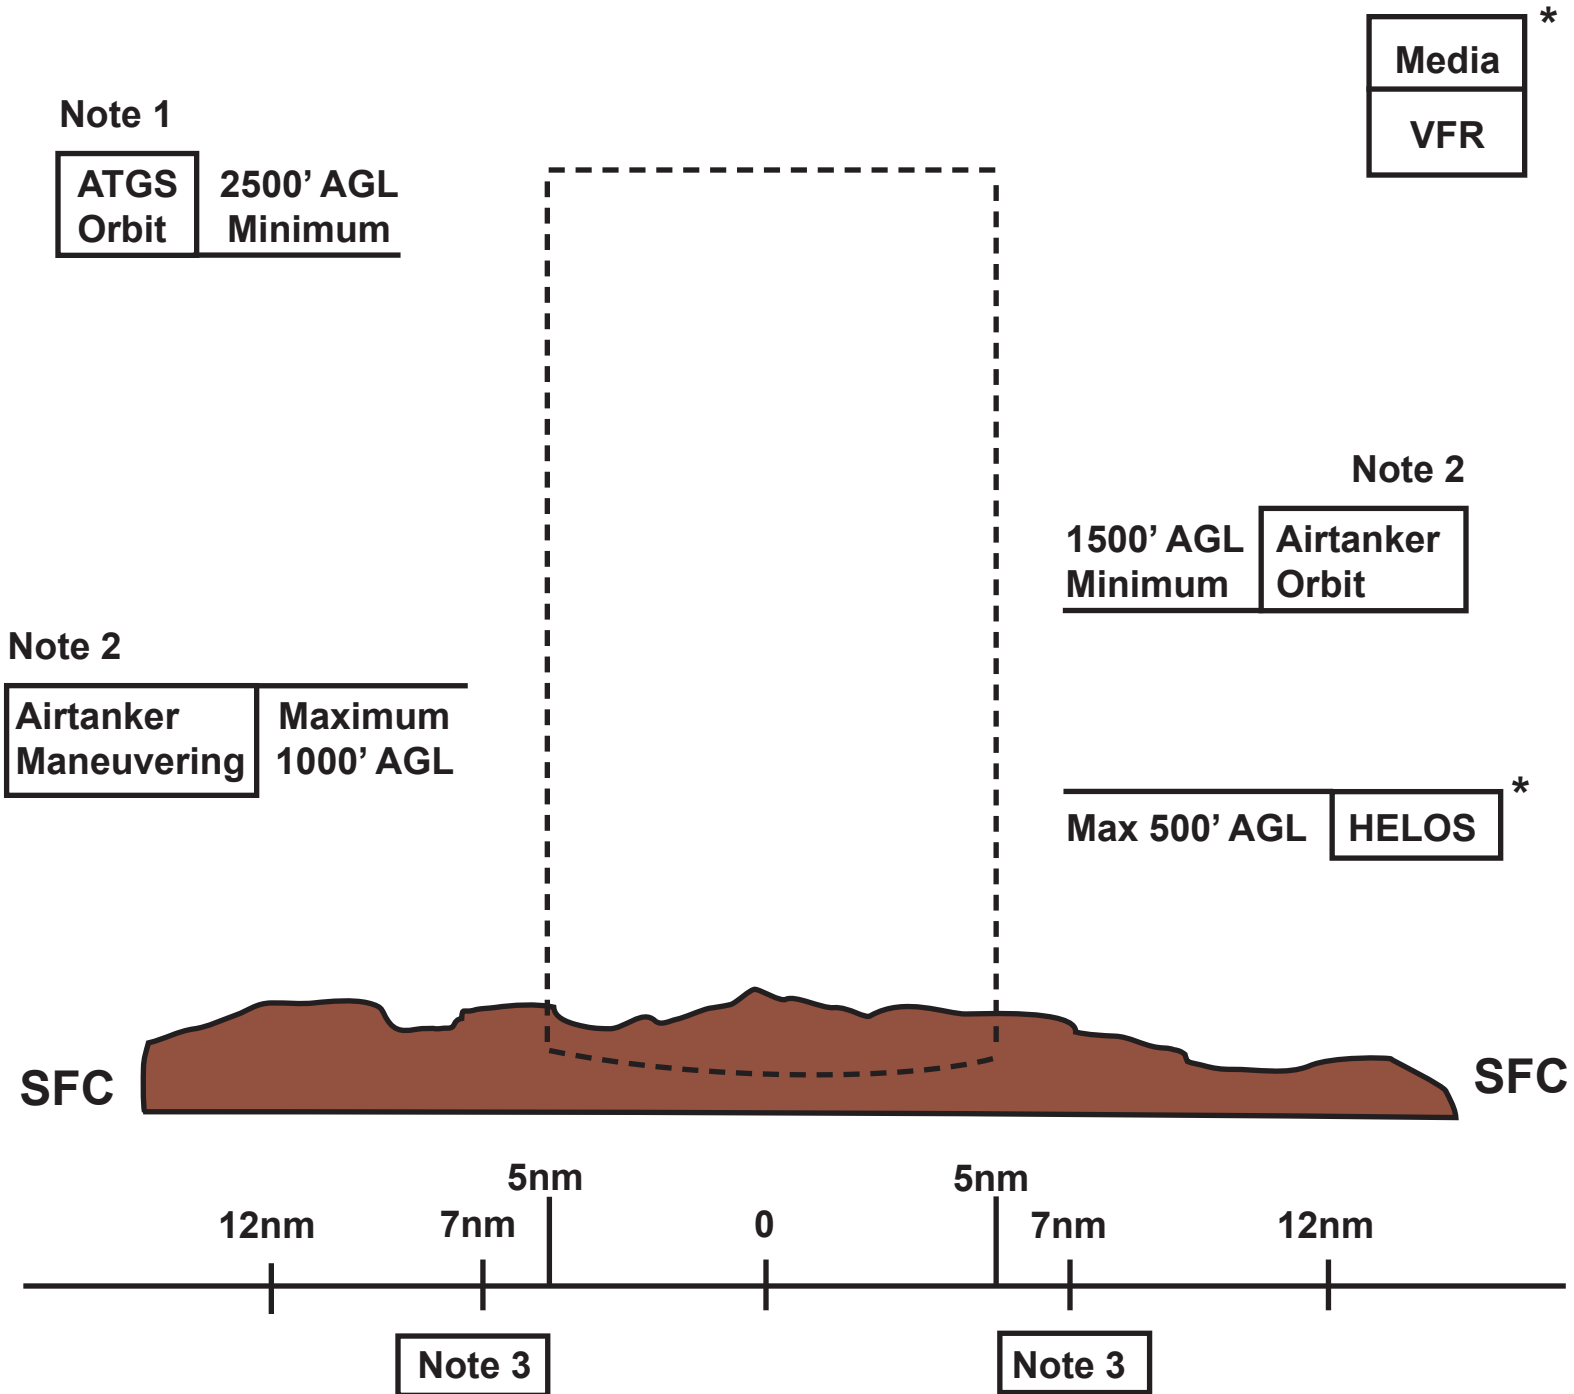

Note 1	1000' min. separation between ATGS orbit and airtanker orbit altitude.
Note 2	500' min. separation between airtanker orbit and maneuvering altitude.
Note 3	On arrival reduce speed to cross 7 nm at assigned altitude and 150 KIAS or less.

\* **HELOS** - Fly assigned altitudes and routes.

\* **MEDIA** - Maintain VFR separation above highest incident aircraft or position and altitude as assigned by controlling aircraft.

AIRTANKER BASE 123.975	AIR GUARD 168.625 TxTone 110.9	AIR to AIR AS ASSIGNED	NATIONAL FLIGHT FOLLOWING 168.650 TxTone 110.9
---------------------------	-----------------------------------	---------------------------	---

